

Part no.	Designation	A Lubrication width [mm]	B Housing width [mm]	C Space require- ment [mm]
1018100100	RB PF-SW 0100	100	135	356
1018100150	RB PF-SW 0150	150	185	406
1018100200	RB PF-SW 0200	200	235	456
1018100250	RB PF-SW 0250	250 </td <td>285</td> <td>506</td>	285	506
1018100300	RB PF-SW 0300	300	335	556
1018100350	RB PF-SW 0350	350	385	606
1018100400	RB PF-SW 0400	400	435	656
1018100450	RB PF-SW 0450	450	485	706
1018100500	RB PF-SW 0500	500	535	756
1018100600	RB PF-SW 0600	600	635	856
1018100700	RB PF-SW 0700	700	735	956
1018100800	RB PF-SW 0800	800	835	1056

Dimensions

